

# MANTRA®

## Information Guide

### BACK

Mantra comes in two back heights, midback or lowback, and in two finish options, Black or Birch.

### INSERT

An upholstered insert is optional on the midback, but required on lowback. The insert can be ordered with single or dual upholstery.

### SEAT HEIGHT ADJUSTMENT

To raise the chair, lift the paddle up while lifting your weight from the seat until you reach the desired height. Release the paddle to lock into place. To lower the chair, lift the paddle up allowing your weight to push the seat down to the desired height. Release the paddle to lock into place.

### CASTER BASE

Standard nylon base available in black, birch and polished aluminum.



### LEMNI ARM

Mantra's distinctive Lemni Arm is an integral part of the chair that connects the seat, back and arms all together. Available in polished aluminum, with an optional arm inlay in Black or Birch to match the base.

### TILT LOCK

To adjust the recline angle, pull the paddle up to unlock it. Recline to the desired position and push the paddle down to lock in place.

### TENSION CONTROL

Leaning back in the chair, decide if the resistance of the chair is comfortable. If it is too stiff, rotate the tension knob counter-clockwise. If the chair does not provide enough resistance, turn the knob clockwise.