



 For material recycling information please refer to the End of Life Recovery Matrix and List of Recycling Facilities, which is available at www.allseating.com.

Tools: #2 #3 Phillips Head, Rubber Mallet or Hammer, Allen Key, Box Cutter
Skill Set: Good manual dexterity.
Estimated Time: 16min per chair.

Steps:

1. Armrest - 2min

Turn the chair upside down, so the bottom is visible. Locate the four fasteners located on the underside of the seat pan and unfasten. If the chair is with width adjustable option, loose the arm knob located underside of the seat panel and remove the arm rest. Remove the width adjustable bracket by unfastening four screws located underside of the seat pan. Flip the chair to the opposing side and repeat the process.

2. Arm Cap - 1min

Turn the arm upside down so the bottom is visible. Locate the two fasteners and unfasten. Remove the arm cap from the arm.

3. Back Bar - 1min

Locate the three fasteners located on the underside of seat pan and unfasten. Remove the backrest and back bar from the chair.

4. Back Rest - 2min

Mesh Back: Carefully cut through the mesh with the help of box cutter. Pull the mesh upward to remove from the chair frame.

Upholstered Back: Carefully cut through the upholstery with the help of box cutter. Pull the upholstery upward to remove from the chair frame

5. Casters - 2min

Lay chair on back. Grasp and pull to remove casters from the base.

6. Base - 1min

Hold the base legs firmly and strike the bottom of cylinder with a hammer until base comes loose, remove base.

7. Cylinder - 1min

Remove cylinder by placing one hand on can of cylinder and hit the bottom of the mechanism with hammer until cylinder separates from mechanism.

**8. Foot Rest - 1min**

Remove footrest by placing one hand on cylinder and the other on footrest. Rotate the footrest in a direction to loose. Read the instruction on footrest for direction.

9. Mechanism - 2min

Turn the chair upside down so the bottom is visible. Locate the four fasteners located on the underside of the seat pan or seat slider and unfasten. Remove mechanism from the seat pan or seat slider.

10. Seat - 2min

Turn the chair upside down so the bottom is visible. Locate the four fasteners located on the underside of the mechanism or seat slider and unfasten. Remove seat from mechanism or seat slider.

11. Seat Slider - 1min

Turn the chair upside down so the bottom is visible. Locate the four fasteners located on the underside of the seat pan and unfasten. Remove seat slider from seat pan.