



For material recycling information please refer to the End of Life Recovery Matrix and List of Recycling Facilities, which is available at www.allseating.com.



Tools: #2 #3 Phillips Head, Rubber Mallet or Hammer, Allen Key, Box Cutter
Skill Set: Good manual dexterity.
Estimated Time: 15min per chair.

Steps:

1. Armrest - 2min

Turn the chair upside down, so the bottom is visible. Locate the four fasteners located on the underside of the seat pan and unfasten. If the chair is with width adjustable option, loose the arm knob located underside of the seat panel and remove the arm rest. Remove the width adjustable bracket by unfastening four screws located underside of the seat pan. Flip the chair to the opposing side and repeat the process.

2. Arm Cap - 1min

Turn the arm upside down so the bottom is visible. Locate the two fasteners and unfasten. Remove the arm cap from the arm.

3. Back Rest - 3min

Locate the three fasteners located on the underside of seat pan and unfasten. Remove the backrest from the chair.

Note: If customer wishes to further disassemble the back rest, unzip it and torn off the upholstery and foam from the back rest. Use drill to remove back bar from the back frame.

4. Casters - 2min

Lay chair on back. Grasp and pull to remove casters from the base.

5. Base - 1min

Hold the base legs firmly and strike the bottom of cylinder with a hammer until base comes loose, remove base.

6. Cylinder - 1min

Remove cylinder by placing one hand on can of cylinder and hit the bottom of the mechanism

**7. Mechanism - 2min**

Turn the chair upside down so the bottom is visible. Locate the four fasteners located on the underside of the seat pan or seat slider and unfasten. Remove mechanism from the seat pan or seat slider.

8. Seat - 2min

Turn the chair upside down so the bottom is visible. Locate the four fasteners located on the underside of the mechanism or seat slider and unfasten. Remove seat from mechanism or seat slider.

9. Seat Slider - 1min

Turn the chair upside down so the bottom is visible. Locate the four fasteners located on the underside of the seat pan and unfasten. Remove seat slider from seat pan.