

# ENTAIL™

## Information Guide

### HEADREST (OPTIONAL)

Pivot the headrest upward or downward to desired position.

### SEAT SLIDER


Located under the chair on the right side, in front of the arm. Pull lever outward to unlock, slide into desired position and release to lock in position.

### SEAT HEIGHT

To raise, push the paddle down while taking your weight off the chair. To lower, stay seated and push the paddle down. Release when you reach the desired height.

### TILT LOCK

To adjust the chair tilt, pull the paddle out to unlock, recline to desired position, push the paddle in to lock.

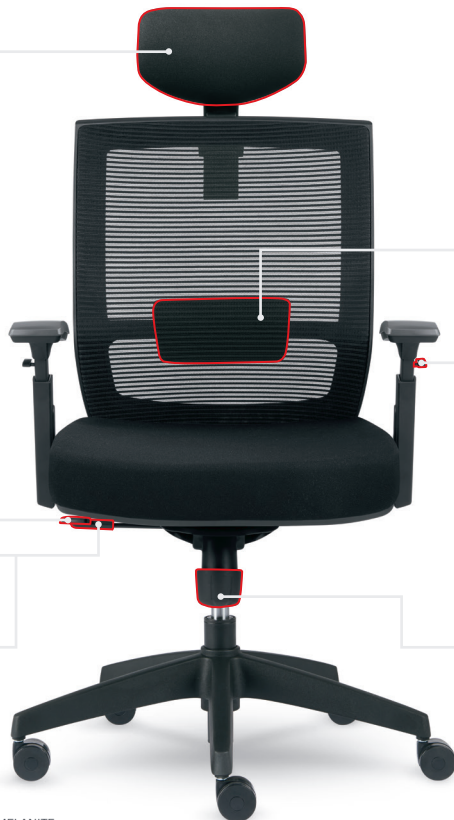

### LUMBAR SUPPORT (OPTIONAL)

Pivot the lumbar support upward or downward to desired position.

### DUAL FUNCTION ARMS

Press the lever located under the arm cap to raise or lower the arm. Release the lever to lock in place. Shift the arm backwards and out of the way to engage closer to the work surface.

### TILT TENSION

Adjust by turning the knob under the front of the chair – clockwise to loosen and counter-clockwise to tighten.