

**This disassembly instruction is applicable to ASTUTE Side Chairs / Counter & Bar Stools**



**For material recycling information please refer to the End of Life Recovery Matrix and List of Recycling Facilities, which is available at [www.allseating.com](http://www.allseating.com).**

**Tools:** #2 #3 Phillips head, Rubber mallet or hammer, Small flathead screwdriver, Allen key, Box cutter.

**Skill Set:** Good manual dexterity

**Estimated Time:** 5 to 6 minutes per chair

**Steps:**

1. Seat - 3min  
Turn the chair upside down so the bottom is visible. Locate the twelve (4) screw bumpers located underneath and unfasten. Remove the seat panel from the chair frame.

2. Glides - 1min  
If the chair has glides, still with the chair upside down, firmly grasp the glide with pliers and wiggle upward until free. Repeat process for all four feet.

Sled Base - 1min  
If the chair has sled bases, remove each sled base by knocking off the sled from each leg of the frame using a mallet.

Casters - 2min  
If the chair has casters, remove each caster by knocking off the caster from the frame using a mallet.

3. Backrest - 1min  
With the chair upside down, knock the underside of the backrest until it is free from the arm.

**Note:** The arms need not be removed from the frame. Both components of the chair are metal.