

# OLIVE™

## Instruction Guide

### ARMS

To adjust the height, press the trigger at the front of the arm, adjust to desired height and release. Arm caps slide forward and back for forearm support.

If adjustable width is specified [optional], turn the knob counter-clockwise to loosen the bracket. Slide the arm inward or outward to reach desired width on each arm. Turn the knob clockwise to tighten and lock arms in place.

### SEAT SLIDER [OPTIONAL]

The integrated seat slider control is naturally accessible under the right side of the seat. Push the button in and slide to the desired position. Release to lock the seat in place.

### HEIGHT ADJUSTMENT

For desired seat height use the lever under the right side of the seat. To raise the seat, lift the lever up while taking your weight off the chair. To lower the seat, stay seated and lift the lever. Release the lever when you reach the desired height.



ADJUSTABLE WIDTH KNOB



TILT LOCK LEVER

TENSION KNOB

### HEADREST [OPTIONAL]

The headrest is height adjustable for optimal comfort.

### LUMBAR [OPTIONAL]

To adjust Olive's lumbar pad, reach behind the chair and grab the connecting rings, and pull up to your desired height. To lower the lumbar pad, pull up to the highest position to release the lock mechanism, allowing the lumbar to return to the lowest setting.

### TILT TENSION + LOCK

For tension, adjust by turning tension knob clockwise to tighten and counterclockwise to loosen. To lock the recline of the backrest, lean back to the desired position, push the tilt lock lever down to lock in place. To release, pull the lever up to unlock.