


**This disassembly instruction is applicable to EXCHANGE 120deg Linking Table.**

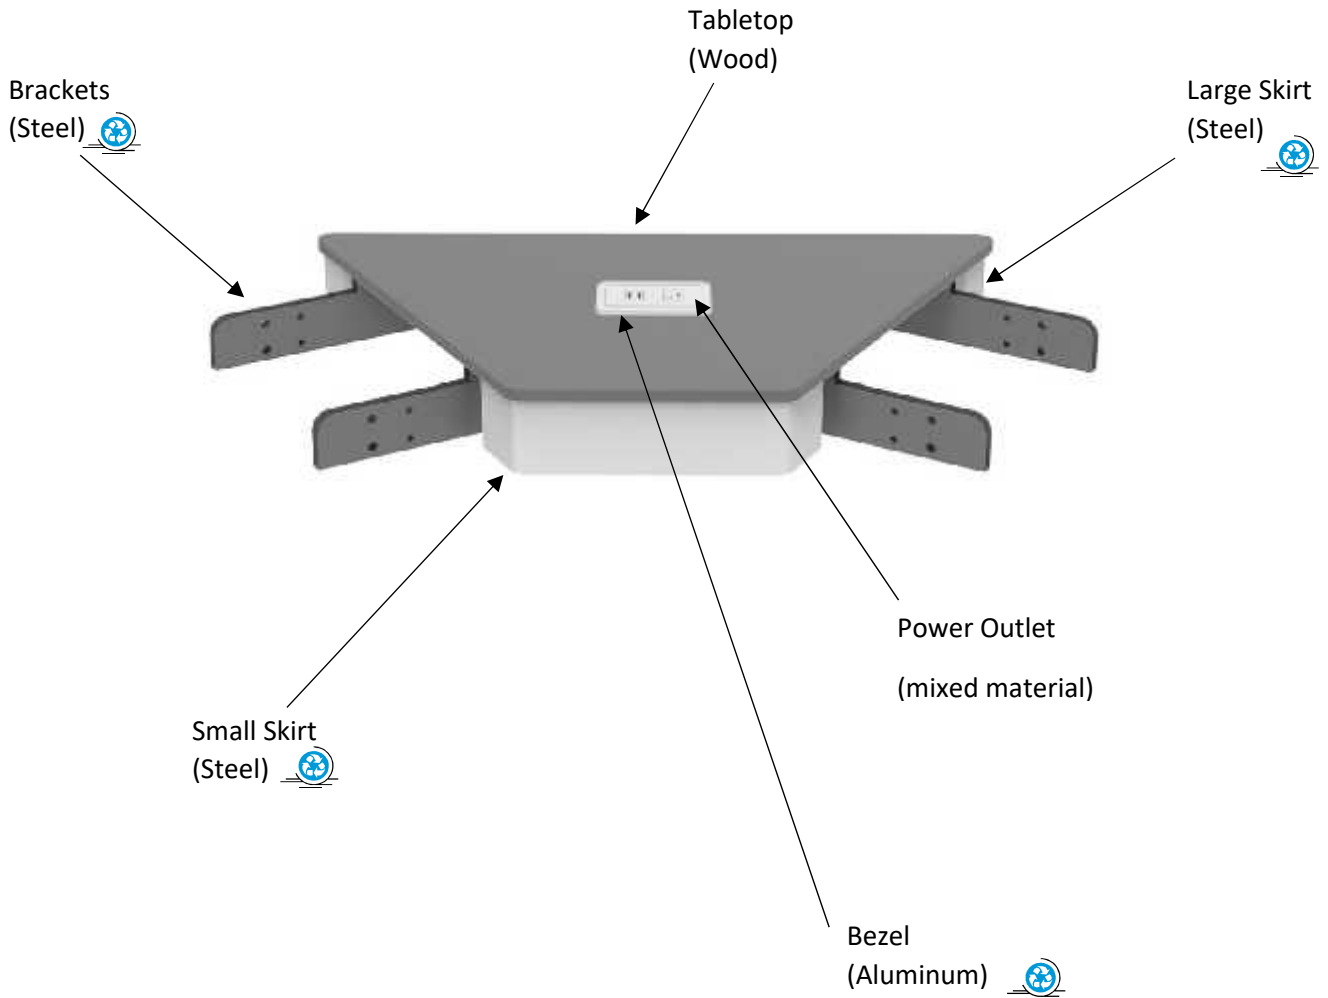

**For material recycling information please refer to the End of Life Recovery Matrix and List of Recycling Facilities, which is available at [www.allseating.com](http://www.allseating.com).**

Tools: Philips Screwdriver, Allen Wrench

Skill Set: Good manual dexterity

Estimated Time: 8 min. per chair

- Steps:
1. Steel Skirts – 2 min.  
Turn the table over and remove the steel skirts by unscrewing the wood screws attaching the skirts to the bottom of the table.
  2. Brackets – 4 min.  
Remove the four (4) steel brackets by unscrewing from the bottom of the table.
  3. Power Outlet – 2 min.  
Remove the screws off the metal plate to remove the power outlet and bezel from the table.