


## Disassembly Instructions EXCHANGE 24" Linking Table

 
Document No: CDM-E4L07 Issue Date: 06-APR-2020

Revision: Revised Date:

This disassembly instruction is applicable to EXCHANGE 24" Linking Table.

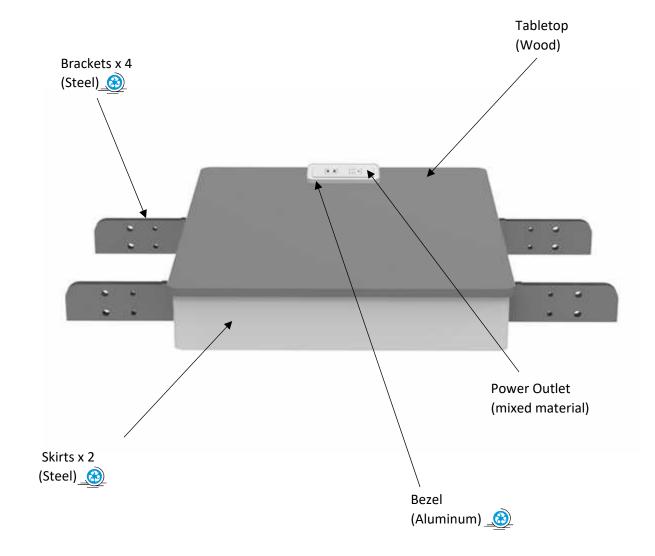

For material recycling information please refer to the End of Life Recovery Matrix and List of Recycling Facilities, which is available at www.allseating.com.



## Disassembly Instructions EXCHANGE 24" Linking Table

Document No: CDM-E4L07 Issue Date: 06-APR-2020

Revision: 0

Revised Date:

Tools: Philips Screwdriver, Allen Wrench

Skill Set: Good manual dexterity

Estimated Time: 8 min. per chair

Steps: 1. Steel Skirts – 2 min.

Turn the table over and remove the two (2) steel skirts by unscrewing the wood

screws attaching the skirts to the bottom of the table.

2. Brackets - 4 min.

Remove the four (4) steel brackets by unscrewing from the bottom of the table.

3. Power Outlet – 2 min.

Remove the screws off the metal plate to remove the power outlet and bezel from

the table.