

This disassembly instruction is applicable to ALL FOSTER TABLES

Tabletop
(Wood)



Glides
(Plastic)

Legs, Cross Bars, Brackets
(Steel) 

Tools: Philips Screwdriver, Allen Wrench, Pliers

Skill Set: Good manual dexterity

Estimated Time: 4 minutes

Steps:

1. Glides – 1 min

) Turn the table over and pop out the glides using a screwdriver or pliers

2. Legs, Cross Bars, Brackets – 3 min

) Remove the legs, cross bars, and brackets by unscrewing from the wood