



These disassembly instructions are also applicable to TWIST Side Chair.



 For material recycling information please refer to the End of Life Recovery Matrix and List of Recycling Facilities, which is available at [www.allseating.com](http://www.allseating.com).

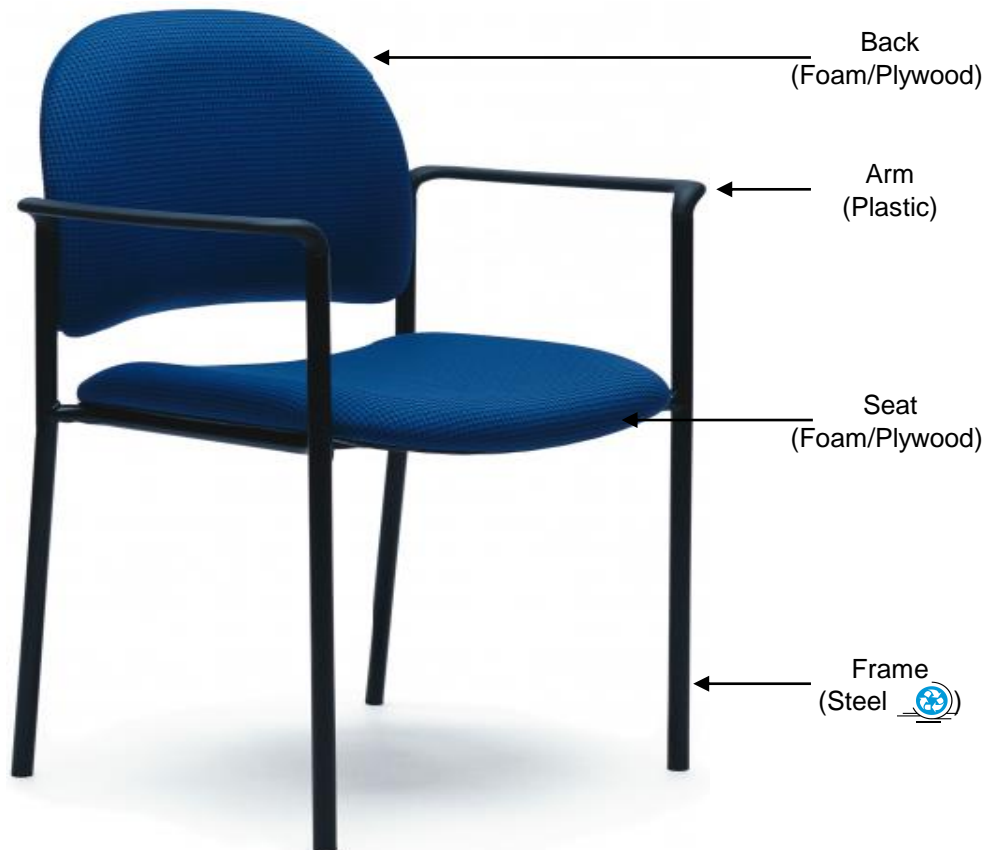

**These disassembly instructions are also applicable to TWIST Side Chair.**

Tools: #2 #3 Phillips head, Hammer or Rubber mallet, Pliers, Box cutter.  
Skill Set: Good manual dexterity.  
Estimated Time: 10min per chair.

**Steps:**

**1. Armrest - 2min**

With a rubber mallet or hammer, knock the underside of the arm rest. Continue to knock until the arm rest is free from the chair frame. This process may require some force. Flip the chair to the opposing side and repeat the process.

**2. Seat - 3min**

Turn the chair upside down so the bottom is visible. Locate the four fasteners located on the underside of the seat pan and unfasten. Remove the seat panel from the chair frame.

**3. Back Rest - 4min**

In these chairs, the fasteners may be concealed between the back rest and back panel. In this event, carefully insert the tip of screwdriver in between the back panel and back rest. Push down on the handle of the screwdriver while also applying pressure into the back panel and back rest to pry both apart. Continue to apply pressure in this way until the back panel is free from the back rest. Once the fasteners are sufficiently exposed, remove the back rest by unscrewing fasteners.

**4. Feet Glides - 1min**

Once both the seat and back are removed from the frame, re-position the chair upside down to access glides. With pliers, firmly grasp the glide and wiggle upward until free. Repeat process for all four feet.